

SERVICE



MANUAL DE INSTRUÇÕES
INSTRUCTIONS MANUAL
BEDIENUNGSANLEITUNG



2113R | 2123R
FOGÃO ELÉCTRICO
ELECTRIC COOKING TOP
KOCHPLATTEN

ELECTRIC COOKING TOP 2113R - 2123R

1. Carefully choose the usage location for the equipment.
 - a) Do not install the equipment close to heat sensitive, combustible materials. If this is not possible, insulate the usage location with non combustible, insulating material.
 - b) Choose a dry location for the equipment.
 - c) Take off the protective plastic foils before using the equipment for the first time.

The cooking tops are not intended for use by people with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they are supervised whilst using it or have been shown how to use it correctly by a person responsible for their safety. The cooking tops are not intended for the use by children. Install the cooking top where it is out of the reach of children. Keep children away from the cooking top at all times.

2. Make sure that the rating on the data plate corresponds to the voltage and frequency of the power supply. Connect the equipment to the power supply. The power supply must have a 30mA protection and a circuit breaker with 3 mm space between the contacts.
 - a) On the back of the equipment, the sign  indicates a terminal for the equipotential connection between equipments.

Do not connect the equipment to the mains electricity supply by a multi-socket adapter or an extension lead.

The model 2123R must be connected to a fixed installation.

3. The cooking top features a knob with a 6-point scale corresponding with 6 power levels. 1 is the minimum power level, 6 the maximum power level.

After connecting the equipment to the electricity supply, turn the knob to the desired position. The orange signal lamp lights up in order to indicate that the equipment is working.

In order to switch the equipment off, turn the knob to position 0.

Use pots, pans or other cooking recipients with a diameter of min. 280 mm and maximum 320 mm. Using bigger recipients can set off the alarm system or damage the plate.

4. Danger of scalding and burning! The plates are very hot. Do not touch the plates while the cooking top is working.

5. In case the cooking plate cracks or breaks, immediately disconnect the equipment from the electricity supply!

6. Always disconnect the equipment from the power supply before proceeding to any cleaning intervention.

Do not use jets of water to clean the equipment. Do not pour water onto the equipment or onto any of its attached components.

Before cleaning, let the cooking top cool down!

Do not use solvent, acid or abrasive detergents!

7. If necessary, substitute the power cable with a cable type H07RN-F 3G 1,5mm² for the models up to 2000 W, and with a cable H07RN-F 3G 2,5mm² for the other models.

8. The equipment has a manual rearm safety thermostat, which completely turns off the machine in case of a malfunction in the temperature control system. In order to rearm the thermostat, remove the lower body panel. This operation must be carried out by a qualified technician.