


SERVICE



Exploded view

FIG0011/E



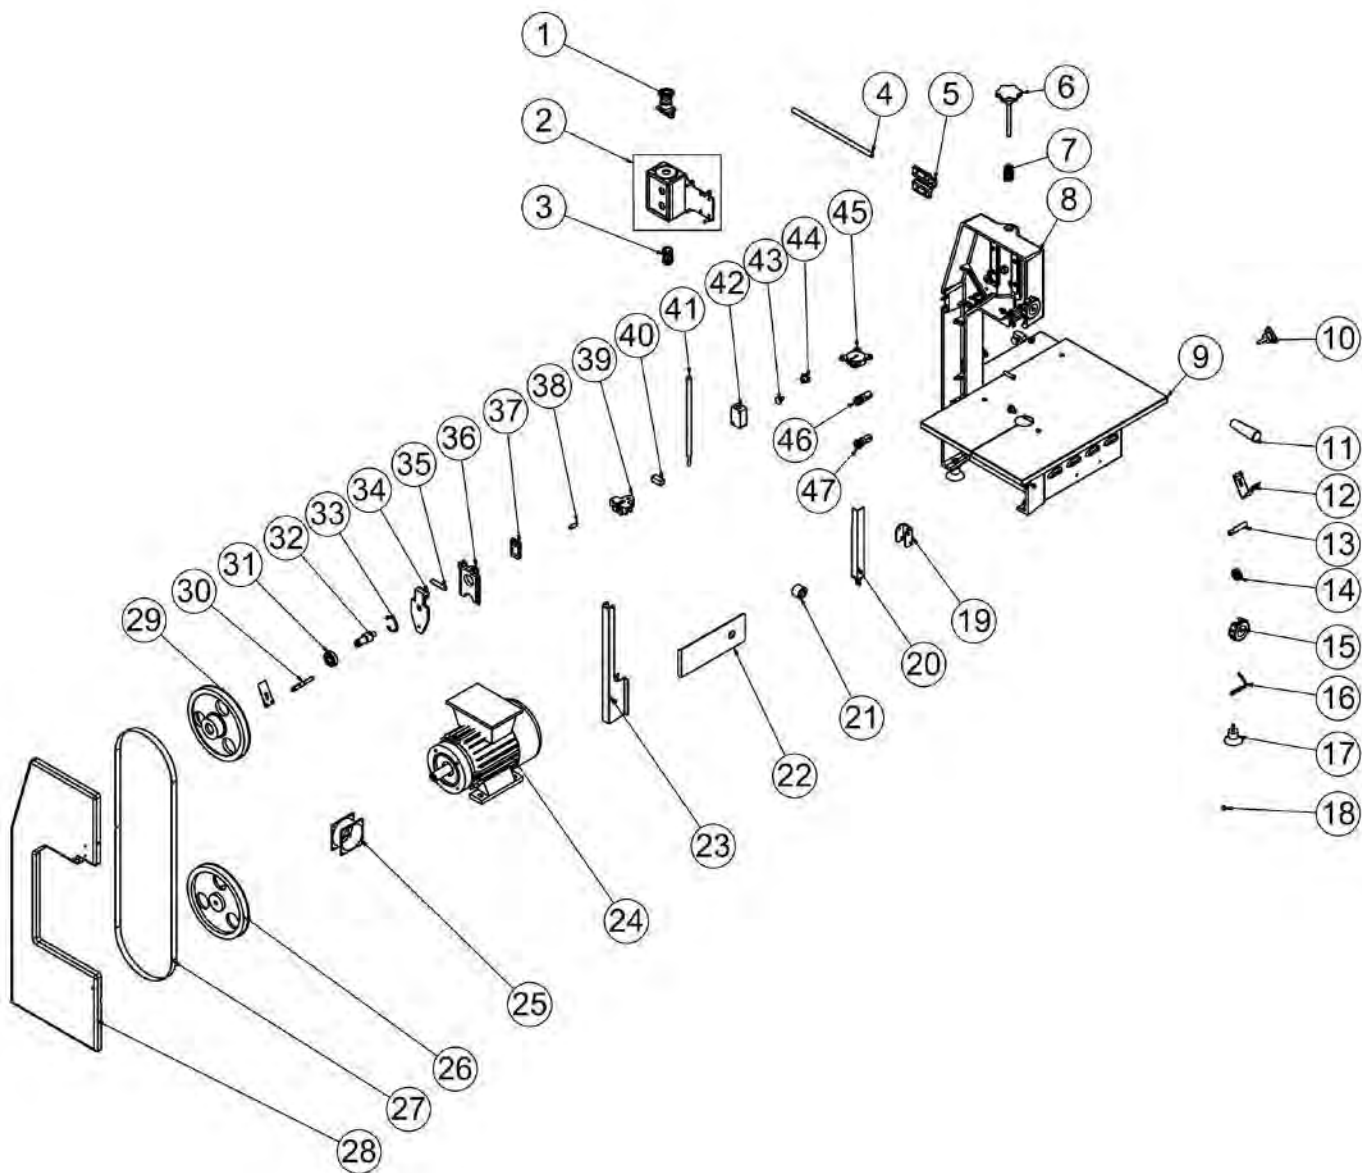

NO	SPARE PART NAME	STOCK CODE
1	EMERGENCY STOP BUTTON	M.ELK-SLT-BTL-003
2	PANEL GROUP	M.ELK-KD-ETK-001
3	PG-9 CABLE FITTING	ERS.M.ELK-RKR-PLS-002
4	SHAFT	YTL-ERS.ETM-KS-0029
5	ARMREST	YTL-ERS.ETM-KS-0062
6	HANDLE	ERS.M.AKS-KLP-BKL-002
7	SPRING	M.YAY-ERS-013
8	BODY	YDK-ERS.ETM-CN-0071
9	CHASSIS	-
10	BOLT	M.AKS-KLP-BKL-015
11	HANDLE	ERS.M.AKS-KLP-BKL-009
12	SCRAPER POLYAMIDE	M.ENJ-ERS-PLS-ETM-008
13	BEARING	YTL-ERS.ETM-KS-0035
14	BEARING (6200 2RS)	M.RLM-NRM-011
15	COVER LOCK	M.ENJ-ERS-PLS-ETM-004
16	MAGNETIC SENSOR	M.ELK-SWC-KTG-001
17	FOOT	M.AKS-AYK-PLS-004
18	MAGNET	M.MIK-ERS-003
19	PROTECTION HINGE SHEET	YSC-ERS.ETM-LZ-0039
20	SAW SHEET SHEET	YSC-ERS.ETM-LZ-0031
21	BUSH	YTL-ERS.ETM-KS-0030
22	ALUMINUM SHEET	YSC-ERS.ETM-LZ-0018
23	PROTECTION SHEET	YSC-ERS.ETM-LZ-0038
24	ELECTRIC MOTOR	M.ELK-MTR-RSM-005
25	FAN 80*80	M.ELK-HVL-KFN-010
26	LOWER PULLEY	YTL-ERS.ETM-KS-0056
27	SAW	M.BCK-ETM-007
28	COVER	YDK-ERS.ETM-CN-0072
29	UPPER PULLEY	YTL-ERS.ETM-KS-0057
30	LATCH LATCH	YTL-ERS.ETM-KS-0060
31	BEARING (6203 ZZ)	M.RLM-NRM-010
32	UPPER PULLEY PIN	YTL-ERS.ETM-KS-0031
33	RING 472-40	B-SEG-SYH-009
34	PULLEY TENSIONER	YDK-ERS.ETM-CN-0058
35	TENSION PIN	YTL-ERS.ETM-KS-0028
36	PULLEY TENSIONER	YDK-ERS.ETM-CN-0057
37	HINGE	M.AKS-MNT-INX-003
38	CENTERING PIN	YTL-ERS.ETM-KS-0041
39	SAW CENTERING	M.ENJ-ERS-PLS-ETM-005
40	CENTERING WEDGE	M.ENJ-ERS-PLS-ETM-006
41	SAW PROTECTION SHAFT	YTL-ERS.ETM-KS-0032
42	SHAFT BASE	YTL-ERS.ETM-KS-0061
43	HANDLE	ERS.M.AKS-KLP-BKL-001
44	BUSH	YTL-ERS.ETM-KS-0049
45	SAW CENTER	M.ENJ-ERS-PLS-ETM-007
46	RED BUTTON (MOMENTARY)	M.ELK-SLT-BTL-010
47	GREEN LIGHTED BUTTON	ERS.M.ELK-SLT-BTL-011