

SERVICE




Instruction manual


BAA0070 | BAA0071 | BAA0072
BAA0073 | BAA0074 | BAA0075




01

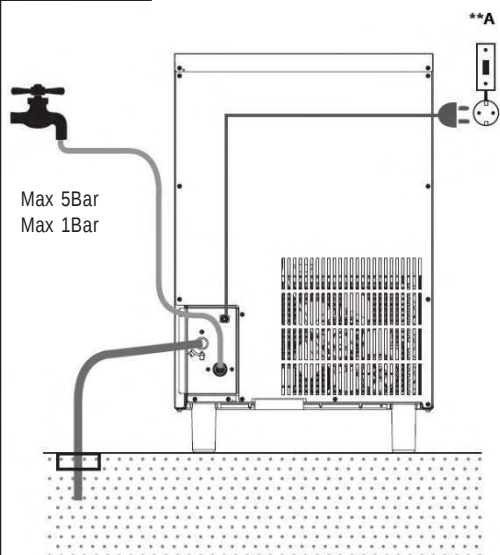


02

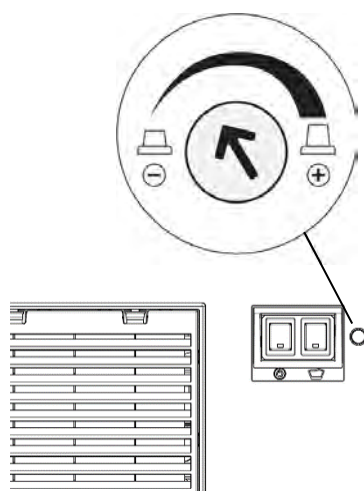

03

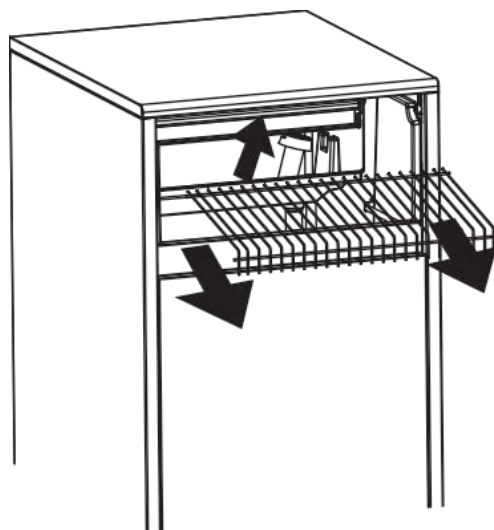

04

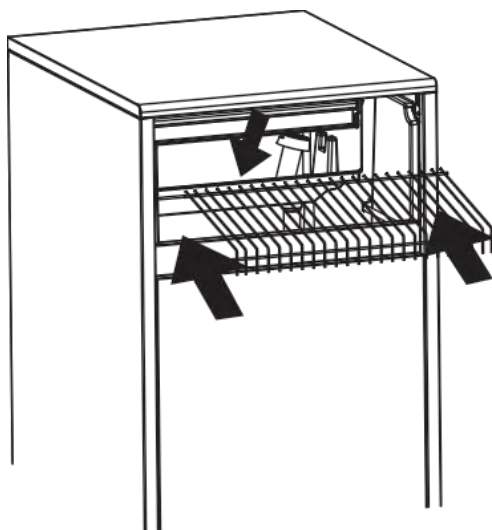

05



Açma-Kapama

On-Off




Buz kalınlığı

Ice Size Dimm


Temizlik

Cleaning


06

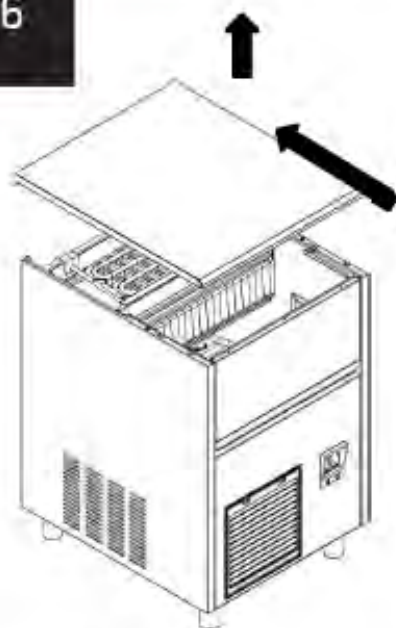


07

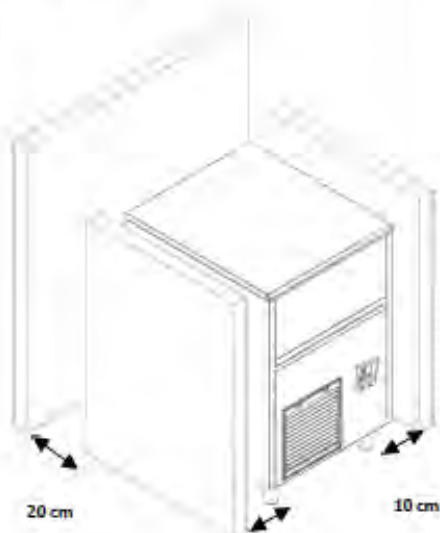

08

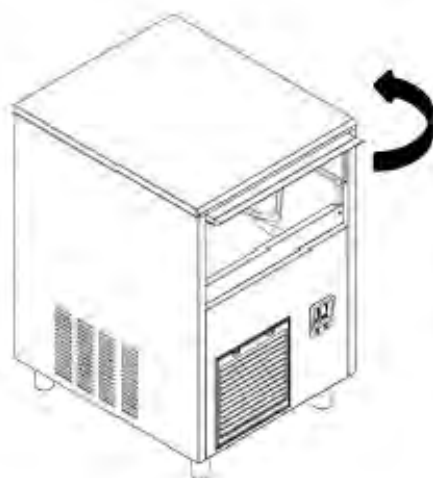

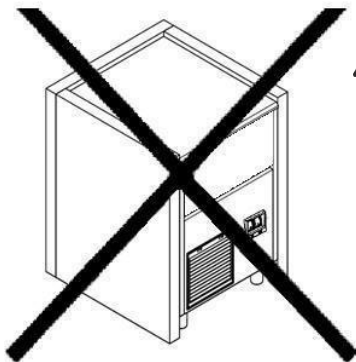

Location: In case the unit is located in an area with no side ventilation, ice maker does not work properly. Leaving enough room around the unit will allow the unit work properly. Normal ice-production capacity is directly relevant with the condenser air delta temperature, water temperature, states of the condenser air channel and age of the machine.



Location: The ice machine must be located inside temperature controlled room. Running the ice machine outdoors or in an area that the temperature can go outside of the working limits may harm the machine, and your warranty may become void. Ice machines are designed and built with the highest respect for security.

TABLE OF CONTENTS

Chapter 01.Safety warnings

Chapter 02.General Outlook and Technical Specifications

Chapter 03.Installation of Your Ice Maker

Chapter 04.Operating Instructions

Chapter 05.Cleaning and Maintenance

Chapter 06.Troubleshooting

Chapter 07.Warranty Information

Chapter 01. Safety warnings

1. Always plug in your product to a grounded power outlet.
2. Your ice maker is designed to operate at voltage shown on Technical Table. Running the product at a different voltage may cause the product to become dysfunctional or even may cause fire.
3. Do not place your ice maker next to any heat source.
4. Set up your ice maker at a humidity-free location and with un-obstructed air circulation around the unit.
5. After the installation is done, do not move your ice maker and wait for atleast two hours to start it.
6. Make sure you cleaned the inside surface of your product before firstuse.
7. Do not use power strips or extension cords to run your product.
8. Protect the power cord against hot surfaces.
9. Children shall not play with the appliance.
10. Children should be supervised to ensure that they do not play with the appliance.
11. Cleaning and user maintenance shall not be made by children without supervision.
12. The machine must not be operated below 10° (Celcius).
13. This appliance is not intended for use by persons (including children) with reduced physical,sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
14. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
16. Water mains pressure,
 - Maximum 5 bar (500,000 pascal),
 - The device must have a minimum of 1 bar (100,000 pascal) for operation.
17. Use the new hose assemblies supplied with the device. Do not reuse old hose assemblies.
18. Do not store explosive materials such as aerosol delivery containing flammable propellant gas in this device

IMPORTANT ADVICE AND RECOMMENDATIONS



ISO 7010 W021 (2011-05) WARNING : Fire /Flammable materials

Before to start, make sure that the appliance is intact. If in doubt, do not use it and contact the authorized technical assistance center.

The ice maker can only be put into operation if the installation has been carried out in compliance with local laws and regulations and according to the instructions in this manual.

This appliance contains R290 refrigerant, a natural gas that is not harmful to the environment but is flammable.

R290 refrigerant is colourless, odourless gas, and as such its presence cannot be identified by the senses. This condition requires special safety measures.

Installation, maintenance repairs and any other intervention on the ice maker must only be performed by trained staff who are qualified in line with national laws to work with flammable gases. Works performed by unqualified staff may result in serious hazards.

Install the ice maker,

- In places with a minimum volume of 1 m³ for every 8 grams of R290; the quantity is indicated on the data plate affixed to the appliance
- In place with flat, intact flooring, with no channels or grilles or other connections to the floors below, where in the event of leakage the gas could accumulate (R290 refrigerant is heavier than air and tends to accumulate downward)
- Away from electrical switches, live flames, hot surfaces and other sources of combustion or ignition.

Before starting the appliance CHECK IT IS IN GOOD CONDITION. IF YOU ARE IN ANY DOUBT DO NOT USE IT.

The ice maker can be operated only if it has been installed in compliance with local laws and regulations and following the instructions given in this manual.

It is strictly forbidden to access the refrigeration circuit of the appliance, call an authorised servicer in case of need.

Do not use mechanical devices such as screwdrivers, sharp tools, blades or other means to speed up the defrosting process, as this could damage the refrigeration circuit and result in gas leaks.

It is absolutely forbidden for the user to Access the appliance's cooling circuit, in case of necessity, call the authorized assistance.

WARNING : Do not use mechanical devices such as screwdrivers, sharp tools or other means to speed up the defrosting process.

WARNING : Keep the vents in the appliance casing or flushmounting frame clear from obstructions.

WARNING : Do not damage the refrigerant circuit.

WARNING : Do not use electrical apparatus in the ice compartments

WARNING : Do not keep explosive substances in the apparatus compartment, such as aerosol spray cans with flammable propellant

WARNING : All ventilation vents on the device or in the building must not be blocked.

WARNING: Do not use electrical appliances inside the food/ice storage compartments unless they are of the type recommended by the manufacturer.

Note: An explanation shall be given of the meaning of the alpha-numeric characters, indicating the test room climatic class of the appliance, that are marked on the appliance.

In the case of damage to the refrigerant circuit : Switch off the machine immediately, disconnect it from the power supply, ventilate the environment, call Authorized Technical Service Center.

NOTE



This product bears (AEEE/WEEE) classification symbols indicating waste electric and electronic equipments. Accordingly, the user must comply with the European directive 2002/96/EC on recycling for the purpose of minimizing the impact of the waste product on the environment. It is recommended to communicate with local authorities about waste disposal.



Caution! This contains information necessary for prevention of serious hazards which may cause the product to become dysfunctional, or may cause injury or loss of life and property during the use of the product.



Warning against electric shock.



This indicates the explanatory and facilitating information related to use of the product.

Chapter 02. General Outlook and Technical Specifications



! Small differences in color and other variations are possible for different visualization, imaging technologies or other technical reasons. The manufacturer is not liable for these differences and deviations. No rights can be obtained due to typographical errors, product descriptions or obvious errors on the website.

* Adjustable legs can vary according to product models.

Technical Table

Product Code	BAA0070		FR30G		BAA0071		FR35UG	
Refrigerant Gas	R404a	R290	R404a	R290	R404a	R290	R404a	R290
Production Capacity (kg)	22	22	27	26	32	33	32	33
Storage Capacity (kg)	4	4	8	8	16	16	16	16
Ice Capacity Per Cycle (adet)	18	18	18	18	28	28	28	28
Ice Type	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice
Cooling System	Air	Air	Air	Air	Air	Air	Air	Air
Climate Class	4	4	4	4	4	4	4	4
Voltage	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz
Maximum Power	400 W	270 W	450 W	320 W	500 W	470 W	535W	410 W
Daily Electric Consumption	6,7 kW	4,8 kW	7,5 kW	5,7 kW	9,0 kW	6,8 kW	9,7 kW	7,4 kW
Fuse **	10 A	10 A	10 A	10 A	10 A	10 A	10 A	10 A
Product Weight(kg)	26	26	30	30	38	38	40	40
Product Dimension (e*d*y)	355*435*590	355*435*590	390*515*640	390*515*640	500*580*690	500*580*690	500*580*690	500*580*690
Packing Dimension (e*d*y)	415*495*765	415*495*765	446*581*815	446*581*815	570*635*855	570*635*855	570*635*855	570*635*855

Product Code	FR40G		FR40UG		BAA0072		FR50UG	
Refrigerant Gas	R404a	R290	R404a	R290	R404a	R290	R404a	R290
Production Capacity (kg)	40	37	40	37	47	47	47	47
Storage Capacity (kg)	16	16	16	16	28	28	28	28
Ice Capacity Per Cycle (adet)	28	28	28	28	36	36	36	36
Ice Type	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice
Cooling System	Air	Air	Air	Air	Air	Air	Air	Air
Climate Class	4	4	4	4	4	4	4	4
Voltage	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz
Maximum Power	550 W	420 W	550 W	420 W	600 W	480 W	650 W	520 W
Daily Electric Consumption	11,0 kW	7,6 kW	11,9 kW	8,4 kW	13,7 kW	8,6 kW	14,7 kW	9,5 kW
Fuse **	10 A	10 A	10 A	10 A	10 A	10 A	10 A	10 A
Product Weight(kg)	39	39	41	41	45	45	47	47
Product Dimension (e*d*y)	500*580*690	500*580*690	500*580*690	500*580*690	500*580*800	500*580*800	500*580*800	500*580*800
Packing Dimension (e*d*y)	570*635*855	570*635*855	570*635*855	570*635*855	555*635*965	555*635*965	555*635*965	555*635*965

Product Code	FR60G		FR60UG		BAA0073		FR70UG	
Refrigerant Gas	R404a	R290	R404a	R290	R404a	R290	R404a	R290
Production Capacity (kg)	57	57	57	57	67	66	67	66
Storage Capacity (kg)	28	28	28	28	40	40	40	40
Ice Capacity Per Cycle (adet)	44	44	44	44	60	60	60	60
Ice Type	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice
Cooling System	Air	Air	Air	Air	Air	Air	Air	Air
Climate Class	4	4	4	4	4	4	4	4
Voltage	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz
Maximum Power	600 W	510 W	680 W	560 W	800 W	590 W	860 W	650 W
Daily Electric Consumption	14,9 kW	9,2 kW	15,7 kW	10,1 kW	16,5 kW	10,6 kW	17,5 kW	11,6 kW
Fuse **	10 A	10 A	10 A	10 A	16 A	16 A	16 A	16 A
Product Weight(kg)	48	48	50	50	62	61	65	65
Product Dimension (e*d*y)	500*580*800	500*580*800	500*580*800	500*580*800	738*600*822	738*600*822	738*600*822	738*600*822
Packing Dimension (e*d*y)	555*635*965	555*635*965	555*635*965	555*635*965	800*670*1000	800*670*1000	800*670*1000	800*670*1000

Product Code	BAA0074		FR90UG		BAA0075		FR100UG	
Refrigerant Gas	R404a	R290	R404a	R290	R404a	R290	R404a	R290
Production Capacity (kg)	85	85	85	85	96	96	96	96
Storage Capacity (kg)	40	40	40	40	40	40	40	40
Ice Capacity Per Cycle (adet)	60	60	60	60	68	68	68	68
Ice Type	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice	Gourmet Ice
Cooling System	Air	Air	Air	Air	Air	Air	Air	Air
Climate Class	4	4	4	4	4	4	4	4
Voltage	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz	230V-50Hz 115V-60Hz
Maximum Power	1100 W	640 W	1180 W	700 W	1200 W	690 W	1280 W	760 W
Daily Electric Consumption	18,0 kW	11,5 kW	19,3 kW	12,5 kW	18,0 kW	12,4 kW	19,7 kW	13,4 kW
Fuse **	16 A	16 A	16 A	16 A	16A	16A	16A	16A
Product Weight(kg)	64	62	66	66	69	66	70	70
Product Dimension (e*d*y)	738*600*822	738*600*822	738*600*822	738*600*822	738*600*822	738*600*822	738*600*822	738*600*822
Packing Dimension (e*d*y)	800*670*1000	800*670*1000	800*670*1000	800*670*1000	800*670*1000	800*670*1000	800*670*1000	800*670*1000

(*) Indicates the daily ice making capacity of the product at 20 °C Ambient and 10 °C Water Inlet temperature.

(**) Check the values of the electrical network to which the product is connected.



The presence of particles in the water due to quality of the water supply and / or contamination with dirt, installation residue, burrs, slag and so on will adversely affect the operation of the ice maker. Such contamination may cause inefficient operation, no ice making, loud noises, etc. Problems with the machine due to plumbing and/or calcified water are not covered by the warranty.

Chapter 03. Installation of Ice Maker

Selection of Location for Your Product

- ① Your product should not be in direct contact with or in close proximity to any heat source.
 - You should leave at least 10 cm of distance if you place your ice maker next to other electrical equipment (such as ovens, computers etc,) that are considered as heat sources.
 - If the product is to be placed next to a wall, the distance between the back surface of the product and the wall should not be less than 20 cm (See Figure-7).
 - Do not place objects in front of the ventilation filter of your ice maker that might prevent air circulation into your product.
 - Do not place your product outdoors. This product is designed to be used indoors.

Electrical Connection

- The voltage and frequency values of the main power supply have to be the same as written on the product label. If you are in doubt or need assistance, please contact the nearest Authorized Service or get help from a qualified electrician.



Make sure your power outlet has been grounded.



The amperage of the circuit breaker to which the product will be plugged in should be 10A**. (See Technical Table / Entry fuse section.)



Do not use power strips with multi sockets or extension cords to operate your product.

Water Use and Connection

Your ice maker is designed to make ice cubes within the most ideal time and size. However, it is important to note that there are some things that will affect the quality of the ice produced by the machine, as well as the health of the internal components of the ice maker.

The Water Supply



- ① Should be good for human consumption,
- ① Should have an optimum level of hardness, Should include minimal amount of chlorine.
- ① The optimum water filters to be used on your product are available and can be purchased from your Authorized Service.

⚠ Water temperature should be between 10°C and 30°C

Installation

- Remove and disassemble all packaging materials of the product before installation.
- The ice slide grate, waterproofing plastics and the ice scoop are provided inside the product. If any part or accessory is missing, please contact our customer services.
- Clean the inner cabinet with warm water and a soft cloth before using the ice maker. Clean the ice trays with warm soapy water. Dry with a soft, cotton cloth. After placing the ice maker at the installation point, wait 2 (two) hours before operating to get the cooling system pressure stabilized. Install the parts inside the ice maker in accordance with the assembly instructions.
- The cold water inlet pressure must not exceed the operating water pressure (5 Bar) indicated on the technical data sheet. If the line pressure is higher than 5 Bar, a pressure reducer must be installed.
- Connect your device to the mono phase - grounded power supply of the rating indicated on the nameplate. Your device is designed to function normally within $\pm 10\%$ of the main voltage. If this range cannot be provided in your local power network, it is recommended to use a voltage regulator.
- If it is necessary to change the location of your ice maker, be sure to transport the unit according to the markings on the original packaging of the device.
- Protect your device against factors that may damage the package and the device (moisture, water, impact, chemical, etc.).
- Only Authorized Service should disassemble the device. Never interfere with the internal parts and elements of the ice-maker.
- The device must be commissioned by the Authorized Service.
- Failure to comply with the above conditions will void your product warranty.
- Do not leave packaging materials (plastic bags, nylon, etc.) within the reach of children.
- The manufacturer reserves the right to change the information in this manual. Therefore; this booklet does not constitute a commitment to specifications.

Chapter 04. Use of the Ice Maker

Operating the Ice Maker

After installing your Ice Maker following the instructions above and making all necessary connections;

1. Make sure that the power outlet you are using for your ice-maker is live and has power.
2. Turn on the water.
3. Set the On-Off button at the front of your product to the On position. (When you set it to the On position, the power light on the button will turn on.)
4. The product will automatically go into a delay-time mode for 5 minute after it is turned on.
5. At the end of the delay-time mode, the product will start getting water and making ice.
6. Your product will complete the ice-making cycle after a certain time, depending on the ambient and water temperature.
7. To change the dimple size of the ice made by the ice maker, adjust the potentiometer in the direction of the arrow. (See Figure-2).

NOTE

In order to allow your product to make ice in the optimum dimple size and time, you need to wait for at least 2 hours after the installation, before turning on the machine.

Shutting Off The Ice Maker



Set the power button at the front of your Ice Maker to “Off” position.



Unplug the product if you are not going to use the ice-maker for a long time. Turn off the water.



There are some malfunction and warning signals defined for the Red light on the power button of the product as detailed in the chart below.

Function Mode	On	Off
Cleaning	3 sec	1 sec
Fault	2 sec	2 sec
Ice Bin Full	1 sec	1 sec

Chapter 05. Cleaning and Maintenance of Your Ice Maker



Safety rules must be observed before cleaning your Ice Maker:

1. Unless otherwise specified, turn off and unplug the unit before starting to clean the Ice Maker.
2. The outer cabinet of the product should only be cleaned by wiping with a damp cloth. Do not spray the unit with water or any other cleaning solvent. This causes undesired electrical failures and jeopardizes the safety of the user.
3. Always wear protective gloves and similar protective equipment during cleaning.
4. Never use cleaning agents and chemicals which may cause cutting, piercing and corrosion to your product. Your Ice Maker will be out of warranty if chemicals are used for cleaning.
5. Do not use any cleaning agents not recommended by your Authorized Service.

Exterior Cleaning of the Ice Maker



The exterior of your ice-maker is made of stainless steel. Wipe the exterior surfaces with a cotton damp cloth or a sponge and then wipe it with a dry, clean cotton cloth.

Cleaning of the Sprayer System

1. Make sure the water and electrical connections of the product are off, in compliance with the cleaning instructions above.
2. Remove all the ice from the storage bin.
3. The power switch should be off, and the water inlet valve should be opened.
4. Remove the slide grate located inside the inner basin and then remove the level discharge plastic from its slot, and ensure the water to be discharged. (See Figure-3)
5. Place the water level drain plastic group back to its slot after discharging the water inside the pool. (See Figure-4)
6. Then, pour the cleaning solution recommended by Authorized Service into the water pool.
7. Select the 'cleaning' setting on your product, then turn the power switch to the "On" position. WITHIN 30 SEC OF TURNING ON THE POWER, YOU MUST PRESS AND HOLD THE 'CLEANING' BUTTON FOR 9 SEC. (See Figure-5)
8. The cleaning process will continue for 10 minutes.
9. At the end of the cleaning cycle, remove all the produced ice from storage bin.

-  Do not turn off the product while cleaning is in progress. After the cleaning process, discharge the water inside the inner basin. (See figure 3)
-  Right after this cleaning, the Ice Set must be cleaned.

Cleaning of the Ice Set

To remove the top cover, remove the screws in “Figure-6”. Remove the plastic cover on the cooling pipes. Clean the cooling pipes and visible surfaces in the tank with cleaning solution / soapy cloth. Then rinse and then dry. Close the plastic cover that protects the cooling system pipes and then close the top cover of the product. Then replace the screws.

Cleaning of the Ice Storage Bin

1. To clean the ice bin, first turn the power switch to the “Off” position. Then disconnect the product from the main power supply.
2. Drain the ice completely from the ice bin.
3. Wipe the inside of the ice bin with cleaning solution / soapy cloth and then rinse / dry.
4. Take care not to allow any lime and/or cleaning solution residue to remain.

Cleaning of the Water Inlet Filter

1. Disconnect the Ice Maker from main power supply.
2. Disconnect the water connection of your ice maker.
3. Remove the water inlet filter. (The frequency of cartridge replacement varies depending on the usage period, but it is recommended to change every 6 months.)
4. Follow the filter manufacturer's maintenance and cleaning instructions / recommendations to perform cleaning and maintenance of the water inlet filter.

 Then return the Ice Maker to operation by following the installation instructions.

 The applications specified in the product cleaning instructions should be performed at least 4-5 times a year.

Chapter 06. Actions to be Taken Before Calling Authorized Service

Malfunction	Probable Reason	Solution
Ice Maker does not work	Power button is Off.	Set the power button to the “On” position.
	The power connection is faulty.	Get the power connection checked by a qualified electrician.
	The Ice Maker is in protection mode.	Check the place selection instructions of the ice maker. Ice Maker does not receive adequate amount of air.
	No power in the outlet.	Check the fuse connected to the outlet.
The compressor stops shortly after it starts working	Ambient temperature is very high	Check the place selection instructions of the ice maker. Ice Maker does not receive adequate amount of air. Clean the ventilation filter.
	Grid voltage is low	Get the power connection checked by a qualified electrician.
Ice Set is cooled but the water inside the water pool is insufficient	Water valve is faulty	Contact the nearest Authorized Service.
	Water supply pressure is low	Make sure that the water supply pressure is greater than 1 Bar.
	Water level drain plastic group seeps	Place the water level plastic group to its slot tightly.
Ices are not transparent	Water nozzle is blocked	Water nozzle sprayer should be checked. The blocked nozzles should be cleaned.
	Water pool is dirty	Clean the Ice Maker by following the cleaning instructions.
	Pressure of the water pump is low	Contact the nearest Authorized Service.
	The water is blurry / dirty / chlorinated	Use a water filter.

Malfunction	Probable Reason	Solution
Ices are much smaller than they should be.	Water is insufficient	Place the water level plastic group to its slot tightly.
	Cooling system is faulty	Check the water main connection for the water leakage. Contact the nearest Authorized Service.
Ices are much bigger than they should be.	Time setting is incorrect	Set the time on the electronic card to a lower value.
	Sensor is faulty	Contact the nearest Authorized Service.
The quantity of the ice is insufficient	Gas leakage in the defrost solenoid	Contact the nearest Authorized Service.
	Water valve is faulty	Contact the nearest Authorized Service.
Device does not stop when the ice bin is full	Sensor is faulty	Contact the nearest Authorized Service.

Chapter 07. Scope of Warranty

Dear Customer,

This warranty provided by our company does not cover the repair of defects caused by unusual use of the ice maker, and the following items are excluded from the warranty.

- Malfunctions and damages caused by the operator during use,
- Malfunctions and damages that occurred during shipment or during loading or unloading and during delivery to the end-user,
- Malfunctions and damages that occurred due to low or high voltage, usage contrary to the voltage written on the label of the product and the electrical installation,
- Malfunctions and damages that occurred after any fire or lightning during use,
- Malfunctions resulting from use of the product contrary to the warnings and methods specified in the user manual,

 The repairing of the above-mentioned malfunctions shall not be included in the scope of the warranty, the repair shall be charged.

 The shipment to the place of use and the assembly of the product are excluded from the product price.

 The responsibility for confirming and granting Warranty Certificate to the consumer shall belong to the seller, reseller, agency or representation from which the consumer bought the good.

 The warranty is valid for the period mentioned in the warranty certificate and only for the malfunctions that occurred in the product; no other claims, for a refund, repair or replacement shall be done. In the case that any destruction/falsification of the original serial number recorded on the warranty certificate and on the product is found, the product shall be out of warranty. As for the repairs within the scope of the warranty, only the services specified in the warranty certificate or on our website are authorized.

Measuring the Mains Water Supply Hardness and Use of Water Filter

0'd	5'd	10'd	15'd	20'd	25'd	German Hardness Degree (d)	French Hardness Degree (f)	English Hardness Degree (e)	Qualification of the Water	Recommendation on Water Filter
0'f	9'f	18'f	27'f	36'f	45'f					
0'e	6,25'e	12,5'e	18,75'e	25'e	31,25'e					
						0-4	0-7	0-5	Very Soft	*
						4-8	7-14	5-10	Soft	**
						8 - 12	14-22	10-15	Slightly Hard	***
						12 - 18	22-32	15-22	Hard	***
						18 - 30	32-54	22-35	Very Hard	(!)

(i) Use of test paper:

- Dip the test paper into the mains water for 1 second.
- Take the paper out of the water and shake.
- Compare what you see on the paper with the color scale.
- Consider our recommendations on the use of filter according to the hardness table.

(i) The hardness is directly proportional to the lime the water contains. As the hardness increases, the amount of lime increases. The lime in the water is inconvenient for the proper functioning of your Ice Maker. In case of non-usage of a filter, it can cause very frequent maintenances and malfunctions that might require repairs out of warranty even in the waters that can be classified as soft.

- * Use of filter is not required.
 - ** Use of filter is recommended for the life of your Ice Maker.
 - *** Filter has to be used. (!)
- Should not be operated without
filter

NOTE:

[illegible]