

SERVICE



CHAP. 7 - MAINTENANCE

7.1 - GENERALITY

Before carrying out any maintenance operation it is necessary to:

Disconnect the power supply from the mains to completely isolate the machine from the rest of the plant.

7.2 - POWER SUPPLY CABLE

Periodically check the wear of the cable and eventually call the "AFTER-SALES CENTRE" to replace it.

7.3 - TOOLS

If the tools should not work the product correctly, call the "AFTER-SALES CENTRE".

CHAP. 8 - DISMANTLING

8.1 - DECOMMISSIONING

If, for any reason it should be decided to place the machine out of order, ensure it cannot be used by any other person: **disconnect and cut the electrical connections.**

8.2 - RAEE Waste of Electrical and Electronic Appliances



According to art.13 of Legislative Decree 25 July 2005, n.151 "Implementation of Directives 2002/95/EC, 2002/96/EC and 2003/108/EC, concerning the restriction on the use of certain hazardous substances in electrical and electronic equipment, as well as the disposal of waste".


The symbol of the crossed out wheeled bin on the appliance or on its packaging indicates that, at the end of its life-span, the product must be collected separately from other waste.

Once reached the end of its life-span, the differential collection of this appliance is arranged and managed by the manufacturer. The user wanting to dispose of this appliance will therefore have to contact the manufacturer and follow the system adopted by him to allow the separate collection of the appliance that has reached the end of its life-span.

The adequate differential collection for the subsequent start of the appliance dismantled for recycling, treatment and compatible environmental disposal, contributes to avoid possible negative effects on the environment and on health, and favours the re-use and/or recycle of the materials composing the machine.

The unlawful disposal of the product on behalf of the owner, involves the application of administrative sanctions provided by the normative in force.

USE AND MAINTENANCE INSTRUCTIONS MANUAL

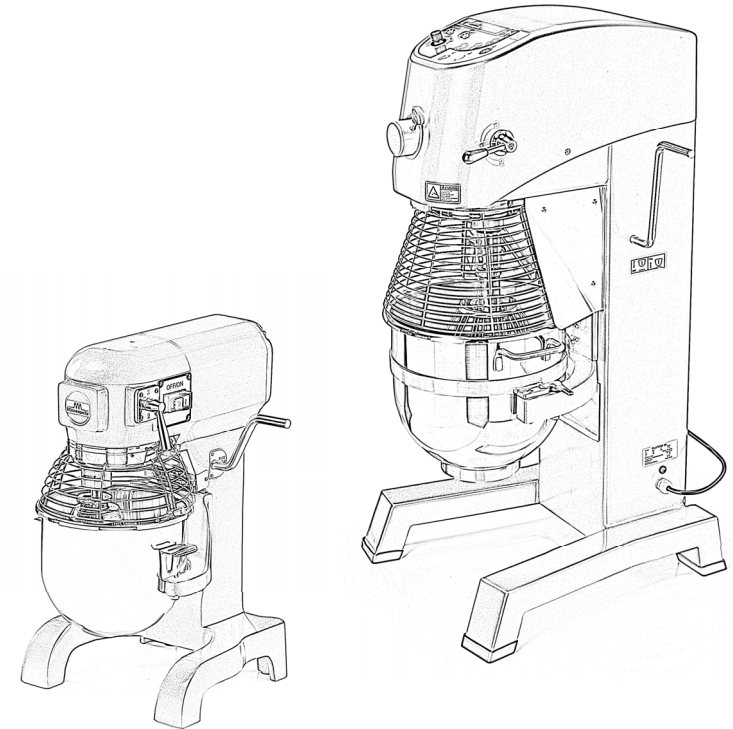

Ed. 04/2021 - ver.002

PREMISE

- This manual has been edited to supply the **client** with information on the machine and on the rules connected to it, as well as the use and maintenance instructions for a better use of the mean, keeping its efficiency intact in time.
- This manual must be handed over to the persons in charge of using the machine and its periodic maintenance.

INDEX OF CHAPTERS

CHAP. 1 - INFORMATION ON THE MACHINE	page 3
1.1 - GENERAL PRECAUTIONS	
1.2 - SAFETY DEVICES INSTALLED ON THE MACHINE	
1.2.1 - mechanical safety devices	
1.2.2 - electrical safety devices	
1.3 - DESCRIPTION OF THE MACHINE	
1.3.1 - general description	
1.3.2 - constructive features	
1.3.3 - machine composition	
CHAP. 2 - TECHNICAL DATA	page 6
2.1 - SIZE, WEIGHT, FEATURES ...	
CHAP. 3 - RECEIVING THE MACHINE	page 7
3.1 - SHIPPING THE MACHINE	
3.2 - CHECKING THE PACKAGE UPON RECEIPT	
3.3 - DISPOSAL OF PACKAGING	
CHAP. 4 - INSTALLATION	page 8
4.1 - PLACING THE MACHINE	
4.2 - SINGLE PHASE ELECTRICAL CONNECTION	
4.2.1 - THREE PHASE ELECTRICAL CONNECTION	
4.2.2 - tools rotation direction	
4.3 - ELECTRICAL LAYOUT	
4.3.1 - Electrical system layout mod. 10-20-30	
4.4 - FUNCTIONING CHECK	
CHAP. 5 - USE OF MACHINE	page 9
5.1 - CONTROLS	
5.2 - LOADING THE PRODUCT	
CHAP. 6 - ROUTINE CLEANING	page 10
6.1 - GENERALITY	
6.2 - PROCEDURE TO FOLLOW WHEN CLEANING MACHINE	
6.2.1 - cleaning the tools and bowl	
6.2.2 - general cleaning	
CHAP. 7 - MAINTENANCE	page 12
7.1 - GENERALITY	
7.2 - POWER SUPPLY CABLE	
7.3 - TOOLS	
CHAP. 8 - DISMANTLING	page 12
8.1 - DECOMMISSIONING	
8.2 - RAEE Waste of Electrical and Electronic Appliances	

CHAP. 6 - ROUTINE CLEANING

6.1 - GENERALITY

- The machine must be cleaned at least once a day or, if necessary, more frequently.
- All parts of the machine which come into direct or indirect contact with the product to be worked, must be scrupulously cleaned.
- The machine must not be cleaned with high pressure cleaners or water jets but with water and neutral detergents. Tools, scrubbers and anything else which might superficially damage the machine must not be used.

Before carrying out any cleaning operation it is necessary to:

- a) Disconnect the mains to completely isolate the machine from the rest of the plant;

6.2 - PROCEDURE TO FOLLOW WHEN CLEANING THE MACHINE

6.2.1 - cleaning the tools and bowl

To clean the tools holder it is necessary to:

- a) Remove the bowl from the machine body;
- b) **CAREFULLY** dismantle the tool.

Once the components have been removed, clean them with warm water and a neutral detergent.

The bowl and tool used must be washed with hot water and neutral detergents every time they are to be left unused for more than two hours or at least once a day.

ATTENTION! Do not wash any Planetaria component in the dishwasher.

6.2.2 - general cleaning

NB.: Disconnect the power supply

The body of the machine can be cleaned with a neutral detergent and a damp cloth, frequently rinsed with warm water.

When finished, accurately dry all parts.

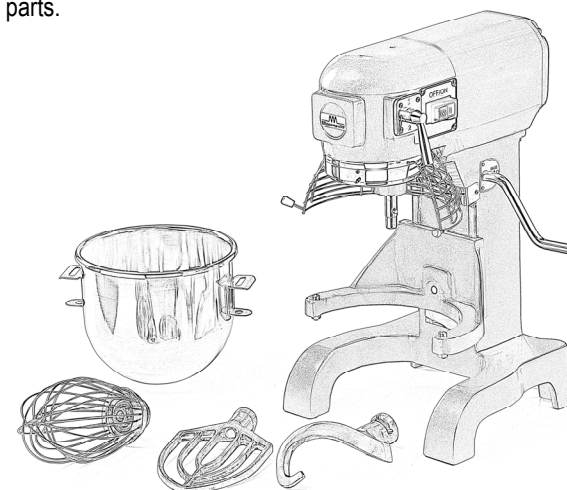


FIG. n.10

5.2 - LOADING THE PRODUCT

The goods to be mixed must be loaded into the bowl exclusively with the motor still, paying attention to the tool.

ATTENTION! Do not introduce solid products!

The procedure is the following:

1. Lower the lever (*Fig.1 - ref.10*) clockwise.
2. Insert the tool suitable for the work to be carried out;
3. Insert the bowl in the appropriate supports and fix it with the hooks present in the supports (*Fig.1 - ref.3*).
4. (**ATTENTION**) place the product into the bowl paying attention to the inserted tool;
5. Lift the lever (*Fig.1 - ref.10*) anti-clockwise, in order to bring the bowl in working position;
6. Assume a correct position in order to avoid accidents (see *FIG. n.9*): the body must be perpendicular to the work surface; the hands must not force the machine components or obstruct the movements of the same.

In any case, do not lean on to the machine, avoiding assuming positions which might entail direct contact with the machine.

ATTENTION!

**Please use the planetary mixer for maximum 30 minutes ON
and then leave it 10 minutes OFF**

7. Start the machine by pressing the "I" button.
8. To change speed, turn power off, select the desired speed then turn power on,
9. At the end of the work stop the machine by pressing stop button "0";
10. Lower the lever (*Fig.1 - ref.10*) clockwise, the bowl lowers, therefore cautiously remove the bowl.

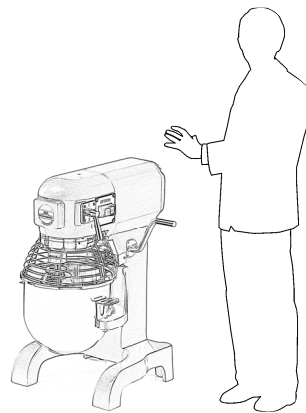


FIG. n.9 - Correct position

CHAP. 1 - INFORMATION ON THE MACHINE

1.1 - GENERAL PRECAUTIONS

- The machine must only be used by trained staff who must be perfectly aware of the safety rules contained in this manual.
- In case of personnel turnover, provide training in time.
- Disconnect the machine from the mains before cleaning and maintaining.
- When intervening for machine maintenance or cleaning (and therefore protections are removed), carefully evaluate the residue risks.
- During maintenance or cleaning, keep concentrated on the operations in progress.
- Periodically check the state of the power supply cable; a worn cable or not intact, represents a serious electrical danger.
- Should the machine give reason to presume or show a malfunctioning, do not use it and do not try to repair it; but call the "After-Sales Centre".
- Do not use the machine for frozen products, products with bones and, however, non-food products.
- Do not try to place your hands or other objects in the container whilst the machine is working.
- The manufacturer is lifted of every responsibility in the following cases:
 - ⇒ the machine is tampered with by unauthorised personnel;
 - ⇒ components are replaced with other non originals;
 - ⇒ the instructions in this annual are not **attentively** followed;
 - ⇒ the machine surfaces are treated with unsuitable products.

1.2 - SAFETY DEVICES INSTALLED ON THE MACHINE

1.2.1 - mechanical safety devices

With regard to mechanical safety, the machine described in this manual is in compliance with Directive **EEC 2006/42**.

1.2.2 - electrical safety devices

With regard to mechanical safety, the machine described in this manual is in compliance with Directive **EEC 2006/95, 2004/108**.

Therefore, the machine is provided with micro which causes the machine to stop in case the protection grid on the bowl is removed (see *FIG. n.1*).

Despite the machine being equipped with the electrical and mechanical protections (both during functioning and during cleaning and maintenance), **RESIDUE RISKS** do however exist, which cannot be completely removed, recalled in this manual with **ATTENTION**. They refer to the danger of bruising during cleaning of the machine and of accessories.

1.3 - DESCRIPTION OF THE MACHINE

1.3.1 - general description

Planetary mixer has been designed and realised by our company, with the precise aim to homogenise, emulsify, whip-up food products like eggs, flour, cream and, however, not particularly hard or consistent, and guarantee:

- Maximum safety in use, cleaning and maintenance;
- Maximum hygiene thanks to the careful selection of the materials which come into contact with food products, and with the elimination of the rough edges in the parts of the machine which come into contact with the product, in order to obtain an easy and complete cleaning as well as easy dismantling;
- Maximum yield;
- Robustness and stability of all its components;
- Maximum noiselessness;
- Easy handling.

1.3.2 - constructive features

Planetary mixer is made with the following materials:

- Painted aluminium and cast iron body;
- Easily removable stainless steel bowl;
- Stainless steel and aluminium tools;
- Chrome steel protection grid.

4.3 - ELECTRICAL LAYOUT

4.3.1 - Electrical system layout mod. 10-20-30

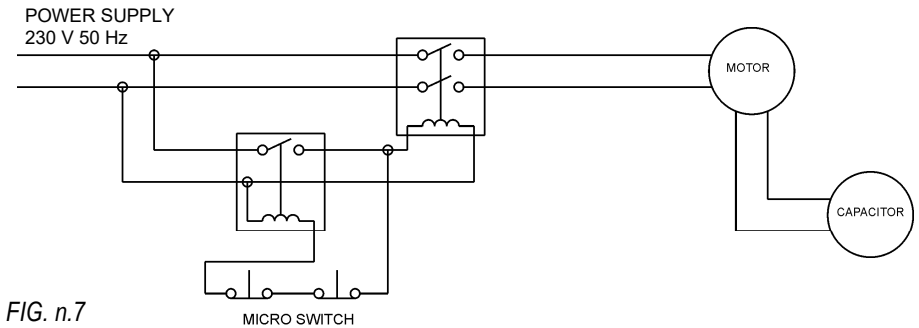


FIG. n.7

4.4 - FUNCTIONING CHECK (FIG. n.1)

Before testing the machine ensure that:

- The mixing bowl (FIG. n.1 - ref.8) is perfectly housed;
- The tool (FIG. n.1 - ref.5-6-7) is perfectly mounted;
- There are no accessories inside the bowl (FIG. n.1 - ref.8);
- The grid (FIG. n.1 - ref.2) is perfectly closed.

The procedure is the following:


1. action the Planetary mixer by pressing start button "I", and subsequently stop button "O";
2. Check if by opening the grid or lowering the bowl (FIG. n.1 - ref.2-8) the Planetary mixer switches off.

CHAP. 5 - USE OF MACHINE

5.1 - CONTROLS


The controls are arranged on the body of the machine as highlighted in the following figure.

Planetary mixer mod. 10 - 20

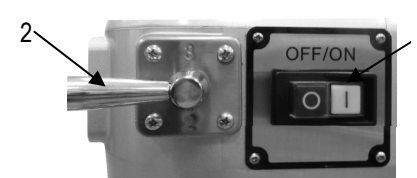

- 1 - O/I switch
- 2 - speed selector 1-2-3

Planetary mixer mod. 30

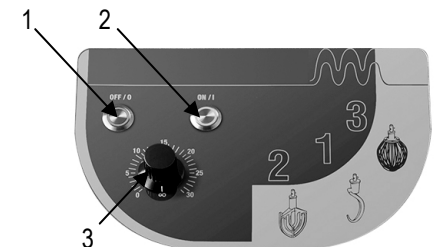

- 1 - push-button OFF/O
- 2 - push-button ON/I
- 3 - timer

FIG. n.8 - Position of controls

CHAP. 4 - INSTALLATION

4.1 - PLACING THE MACHINE

The surface on which the machine will be located must allow for the support dimensions indicated in the table (see Chap. 2), and, therefore, be sufficiently wide, correctly levelled, dry, smooth, robust and stable.

Also, the machine must be installed in a room with 75% max humidity, not salty and a temperature between +5°C and +35°C; however, in rooms which do not entail disorders of the same.

4.2 - SINGLE PHASE ELECTRICAL CONNECTION

The machine is equipped with a power supply cable with 3x1.5 mm² section; 1.5m length and a "SHUKO" plug.


Connect the machine 230 Volt 50 Hz, interposing a 10A, $\Delta I = 0.03A$ magneto-thermal circuit breaker. Ensure the earthing plant is perfectly functional.

Also check that the data reported on the technical-serial number plaque (FIG.n.4) corresponds to the data reported on the delivery and accompanying documents.

4.2.1 - THREE PHASE ELECTRICAL CONNECTION

The machine is equipped with a feeding cable with a cross section area of 5x1,5mm², length $\cong 1.5m$ and a red 15A 3F + T CEI plug. Connect the machine to the 400 V. - 50Hz three-phase supply mains, interposing a magnetothermic differential switch of 10 A, $\Delta I=0.03A$.

Also check that the data reported on the technical-serial number plaque (FIG.n.4) corresponds to the data reported on the delivery and accompanying documents.

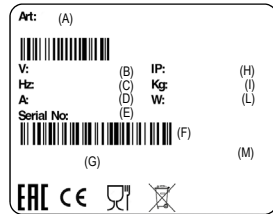

LEGEND
(A) = Product code and name
(B) = Power supply
(C) = Motor frequency
(D) = Amperage
(E) = Serial number
(F) = Barcode
(G) = Manufacturer
(H) = International Protection
(I) = Weight
(L) = Power
(M) = Origin

FIG. n.4 - Technical-serial number plaque

4.2.2 - tools rotation direction

Check the direction of the tools rotation with a pulse of the "I" push-button (ON), immediately followed by the "0" push-button OFF.

The direction of the tools rotation must be clockwise when looking at the machine from the front side (see arrow Fig. n°6). In the case that the rotation direction is not exact, invert (Fig. n° 5) the position of two of the three phase wires (black, gray or brown) in the plug.

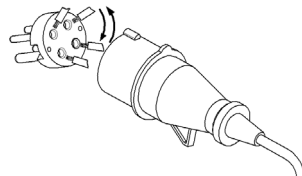


FIG. n.5





FIG. n.6

1.3.3 - machine composition

FIG. n.1 - General view of the machine

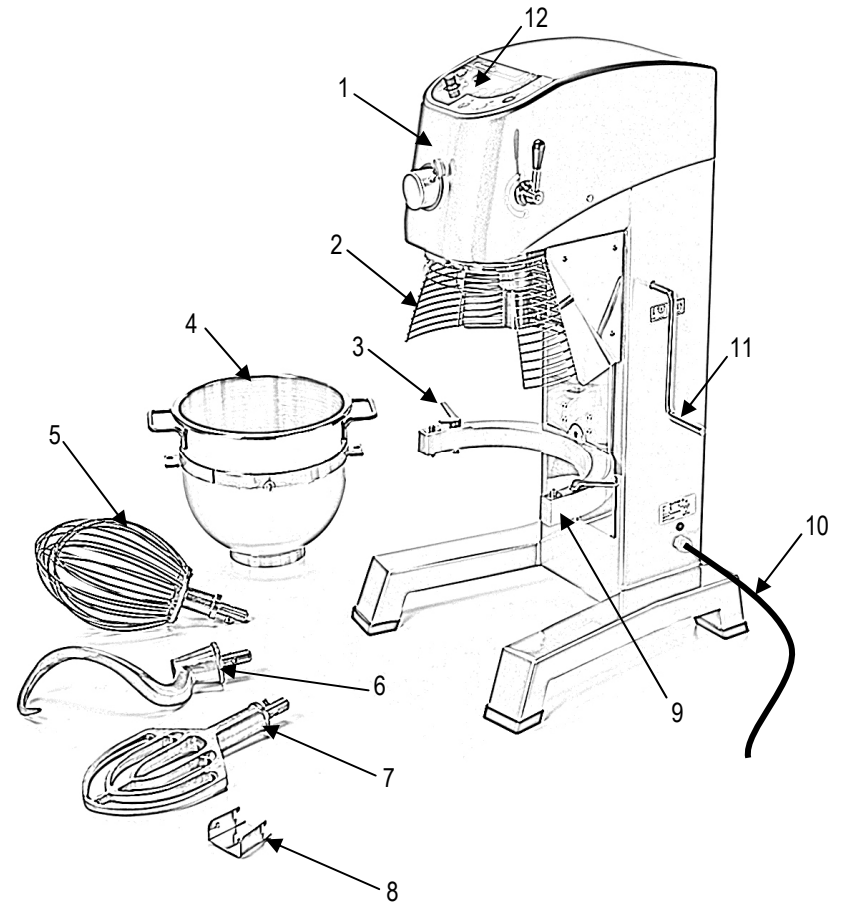


KEY:

- | | |
|------------------------------------|---|
| 1 Machine body | 7 Spatula |
| 2 Protection grid | 8 Feed tray for add ingredients for mod. 30 |
| 3 Bowl fixing hook for. Mod. 20-30 | 9 Bowl support |
| 4 Bowl | 10 Power supply cable |
| 5 Whisk | 11 Bowl lift/lower lever |
| 6 Hook | 12 Controls |

CHAP. 2 - TECHNICAL DATA

2.1 - SIZE, WEIGHT, FEATURES ...

FIG. n.2 - Overall dimensions

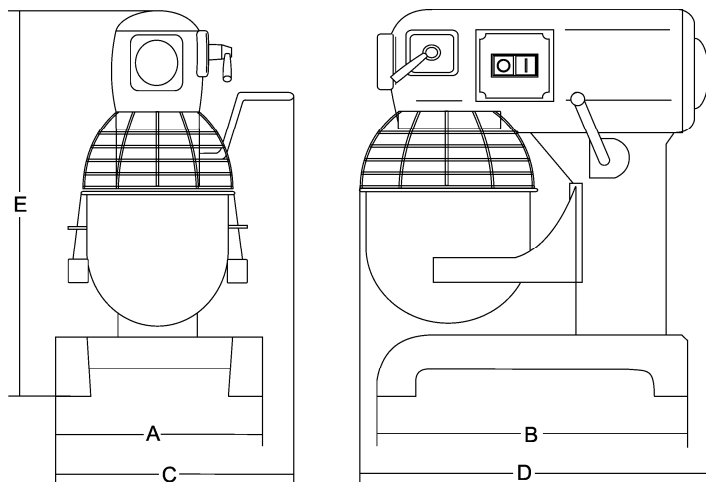

Model	u.m.	10 lt.	20 lt.	30 lt.	
AxB	mm	360x345	420x440	580x660	
CxDxE	mm	440x500x630	515x560x770	630x650x1160	
Bowl capacity	lt	10	20	30	
Whisk revolutions	r.p.m.	1 = 108 2 = 195 3 = 355	1 = 97 2 = 220 3 = 316	1 = 93 2 = 167 3 = 285	
Motor	Watt	450	1100	1500	
Power supply		230V/50Hz	230V/50Hz	230V/50Hz	
Net weight	kg	40	83	169	
Noise level	dB	≤ 70	≤ 70	≤ 70	

ATTENTION: The electrical features for which the machine is prepared, are indicated on a plaque applied on the back of the machine; before carrying out the electrical connection, see 4.2 electrical connection.

CHAP. 3 - RECEIVING THE MACHINE

3.1 - SHIPPING THE MACHINE (see FIG. n.3)

Planetary mixer leaves our warehouses accurately packed; the packaging is made of:

- a) external wooden box;
- b) the machine;
- c) this manual;
- d) CE declaration of conformity.

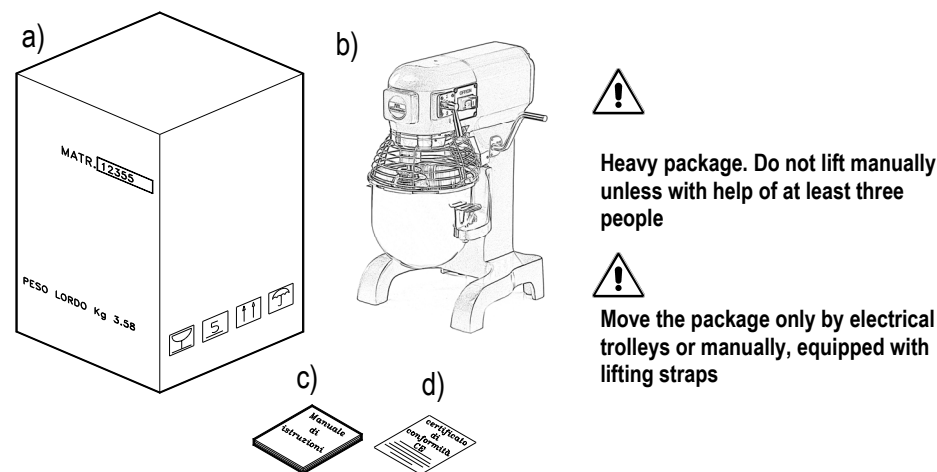


FIG. n.3 - Packaging description

3.2 - CHECKING THE PACKAGE UPON RECEIPT

Upon receiving the package, if there are no external damages, open it to check that all the material is contained within (see FIG. n.3). Whereas, if, upon receiving the package it shows signs of mistreatments, impacts or falls, show the damage to the carrier and, within 3 days from delivery date, shown on the documents, draft a precise report on the damages sustained by the machine. **Do not turn the package upside down!!** When transporting, be sure that it is firmly held from the 4 fundamental points (keeping it parallel to the ground).

3.3 - DISPOSAL OF PACKAGING

The packaging components (cardboard, plastic strap) are products assimilable with municipal solid waste; for this reason, they can be easily disposed of.

In case the machine is installed in countries where particular rules exist, dispose of the packaging in compliance with that provided by the rules in force.